

FINECADDIE

USER MANUAL



● Notice

Thank you very much for using FineCaddie.

Please be sure to read this user manual before using our product.

The usage of the product directly affects its lifespan, and improper use can result in breakdowns.

This manual was written for FINECADDIE model and its functions may be limited based on the model purchased.

Form and functions may change without notice to improve performance, and information and pictures in the user manual may differ for various software versions.

Warranty and support

- This product's software can be updated to the latest version. You can find the latest version, along with information on how to update, at www.fine-drive.com/en.

The newest edition of this operating manual can also be downloaded from www.fine-drive.com/en.

- FineDigital, Inc. does not offer any form of warranty, including implicit warranties, for products other than those licensed by FineDigital, Inc.
- FineDigital, Inc. takes no responsibility for accidental or intentional damage resulting from explanations, examples, functions or uses included in this manual or for errors included in the manual, nor for any accidental or intentional damage resulting from offers, explanations or use of the manual.

Copyright and trademark rights

This user manual is copyrighted and all rights are protected by law.

No part of this manual may be photographed, copied, amended or translated without the prior written consent of FineDigital, Inc., excluding those parts permitted by copyright law.

- The FINECADDIE logo is a trademark of FineDigital, Inc.

FineDigital, Inc.



[Caution]

There is a risk of heat, fire or explosions. Please take note of the following:

1. Keep away from fire. (do not microwave)
2. Do not leave inside the car in hot weather.
3. Do not store or use in warm, humid locations. (sauna, etc.)
4. Do not modify, repair or disassemble the product yourself.
5. Do not subject to any extraordinary impact, e.g. dropping from a high place.
6. Do not expose to temperatures over 50°C.
7. Do not allow contact with water.
8. In case of battery problems discernible to the naked eye, inquire immediately at your nearest Customer Service Center.
9. Do not store in an enclosed space for a long time while power is on.
10. Do not disassemble, compress, or puncture.

Table of Contents

1. How to use FineCaddie correctly	6
1) Correct usage for GPS reception	7
2) Check basic components	8
3) How to wear and assemble components	9
4) How to charge Finecaddie correctly	14
 2. Start FineCaddie	15
1) Button Explanation	16
2) Main Screen (Green View) Explanation	16
3) Start	17
4) End	17
5) Green View	18
6) Hazard View / Bunker View / Driving Distance View	19
7) Measuring Driving Distance	20
8) Virtual Round	21

3. Set up FineCaddie.....	22
1) How to Navigate the Menu Screen.....	23
2) Change Pin Location.....	24
3) Change Left • Right Green.....	24
4) Change Meters • Yards.....	25
5) Change Hole manually.....	25
6) Reset.....	25
7) Error code	26
8) Version.....	26
9) How to Set the Time Zone.....	27
10) How to Select the Language.....	29
 4. How to Update FineCaddie	 30
1) Check the Update Version	31
2) Install FineCaddie EZ downloader	31
3) Start Update	35
 5. Appendix.....	 39
1) Product Warranty	40

1. How to use FineCaddie correctly

- 1) Correct usage for GPS reception
- 2) Check basic components
- 3) How to wear and assemble components
- 4) How to charge FineCaddie correctly

1. How to use FineCaddie correctly

1) Correct usage for GPS reception

- For the quickest GPS signal reception, switch FineCaddie on and wait for minutes until completing to search golf courses and receiving GPS signal with grabbing FineCaddie as 'Proper instance'
- When wearing FineCaddie on the wrist band or the waist belt, please wear it after GPS reception has been completed
- Please do not use FineCaddie to put on the top or bottom of the pocket. GPS reception sensitivity could be greatly reduced



[Incorrect example]



[Correct example]

1. How to use FineCaddie correctly

2) Check basic components

■ Basic components

Please, check the following item after unpacking the product



[FineCaddie]



[Charging cables]



[FineCaddie user manual]



[FineCaddie cartoon quick guide]



[Wrist band](Optional)

 


Please contact your dealer for the missing components.
Our customer service center does not receive inquiries about missing components.

1. How to use FineCaddie correctly

3) How to wear and assemble components

- How to put it on your cap

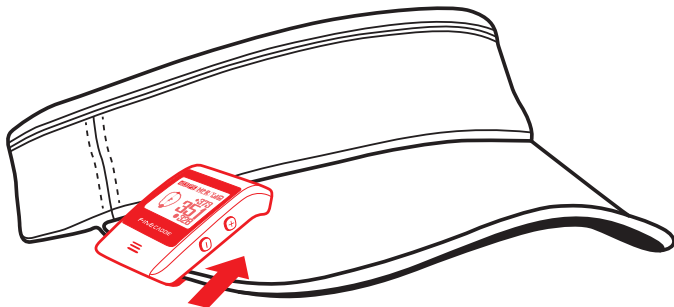


1. How to use FineCaddie correctly

3) How to wear and assemble components

■ How to assemble the wrist band

 - ① How to separate wrist band and fixing pin

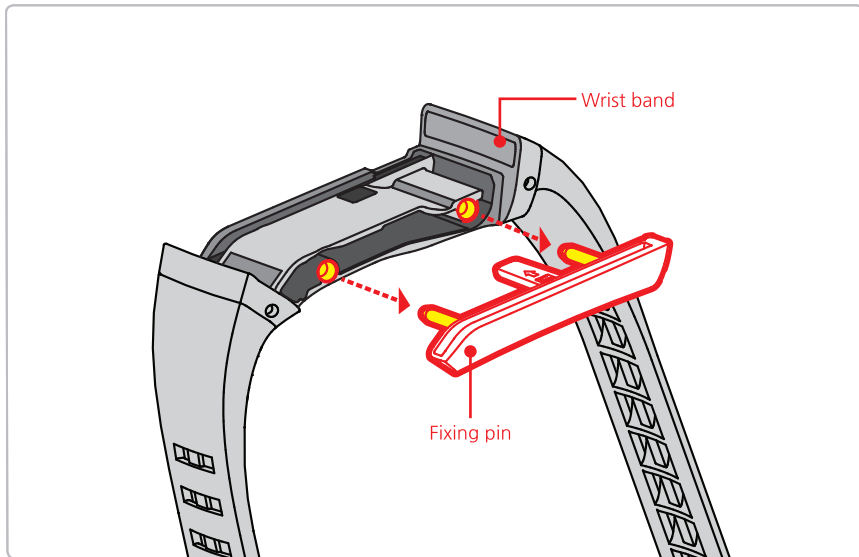


1. How to use FineCaddie correctly

3) How to wear and assemble components

■ How to assemble the wrist band

 - ② How to push the FineCaddie into the wrist band

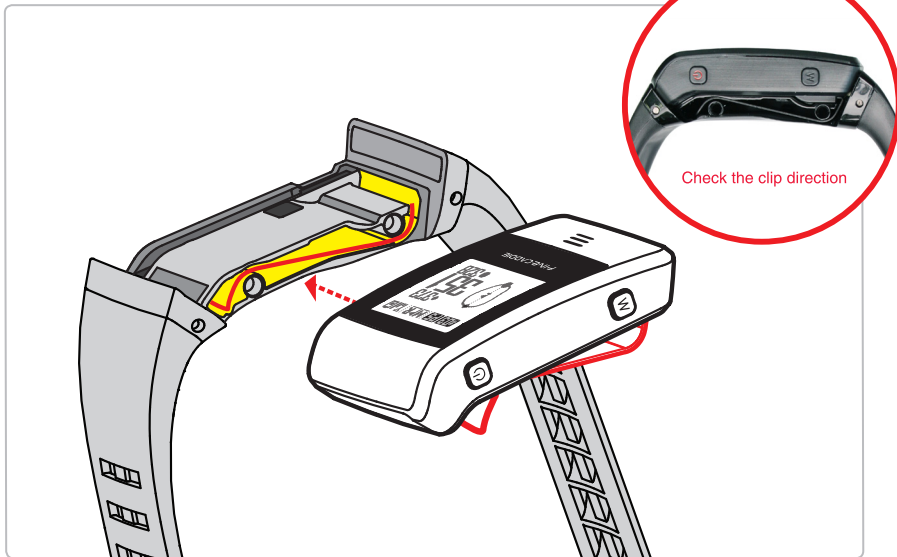


1. How to use FineCaddie correctly

3) How to wear and assemble components

■ How to assemble the wrist band

 ③ How to push the fixing pin into the wrist band

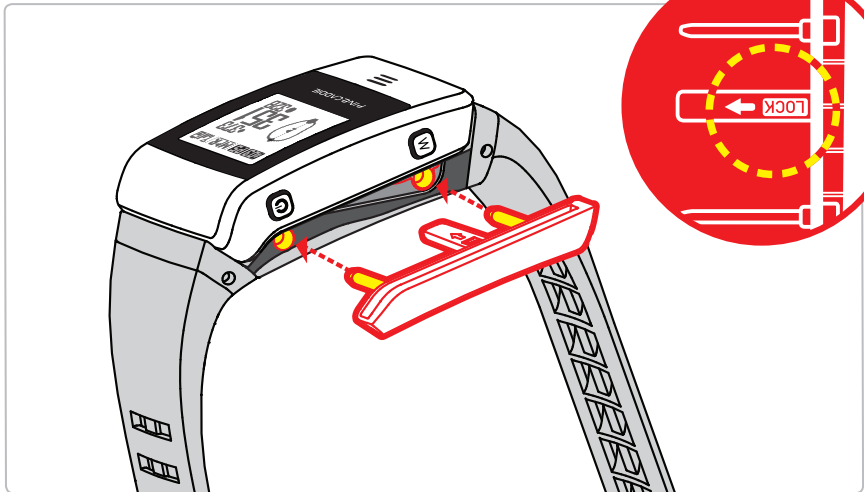

Please push the fixing pin to show 'LOCK' word on it.

Please push the fixing pin until it sounds 'Click'.

1. How to use FineCaddie correctly

3) How to wear and assemble components

■ How to assemble the wrist band

- ④ Assembling the wrist band is completed

 


1. How to use FineCaddie correctly

4) How to charge FineCaddie

■ How to charge FineCaddie

- ① You can charge FineCaddie using PC USB port.

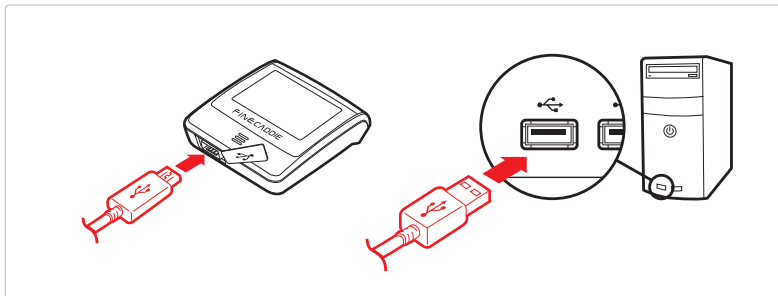

FineCaddie does not offer the charger additionally.

2. Start FineCaddie

- 1) Button Explanation
- 2) Main Screen (Green View) Explanation
- 3) Start
- 4) End
- 5) Green View
- 6) Hazard View / Bunker View / Driving Distance View
- 7) Measuring Driving Distance
- 8) Virtual Round


2. Start FineCaddie

1) Button Explanation




Button explanation	Press	Press and hold
Power button	Backlight	Power on / off
Menu button	View movement / Select	Menu
Voice button	Guide to remaining distance / Cancel	Start measuring driving distance / End
Volume+ button	Volume up / Up	Change Left-Right Green
Volume- button	Volume down / Down	Change Meters-Yards
Volume+- button	-	Change Pin Location

 2) Main Screen (Green View) Explanation

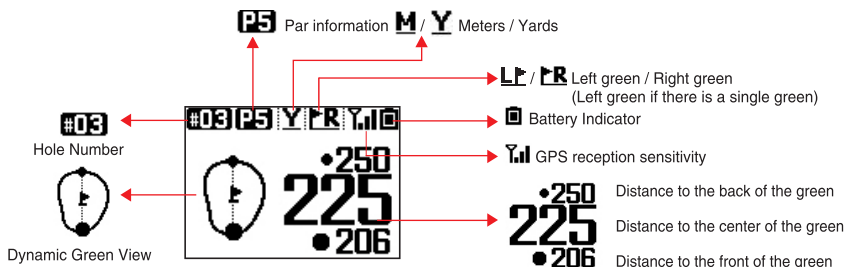

2. Start FineCaddie

 3) Start

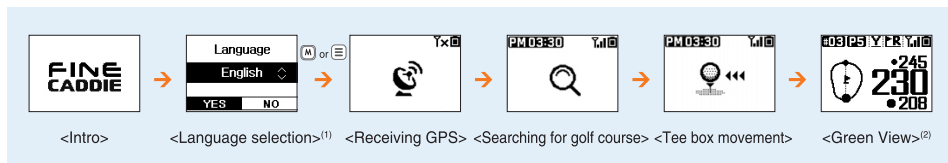

■ Power on

- ① Press and hold the Power button at the upper left of FineCaddie until the Green View screen (main screen) appears

■ Language selection ⁽¹⁾

- ① Press the Volume button to move to your desired language
- ① Press the Menu button or Voice button to save and quit

⁽¹⁾ The language selection screen only appears when first used

⁽²⁾ If GPS reception does not work (indoors, etc.), the product will stand by in the "Receiving GPS" condition

If the golf course does not appear after GPS reception, the product will stand by in the "Searching for golf course" condition

4) End

■ Power off

- ① Press and hold the Power button at the upper left of FineCaddie to turn off the power

2. Start FineCaddie

5) Green View

 
■ Guide to remaining distance

- ① Press the (≡) Voice button to hear information about the remaining distance to the front / center / back of the green



■ Dynamic Green View


- ① Depending on the user's location, while the green is rotating in real-time, precise information about the remaining distance to the front / center / back of the green

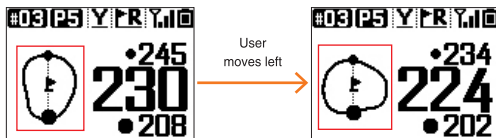

2. Start FineCaddie

6) Hazard View / Bunker View / Driving Distance View

 ■ Screen movement method



■ Hazard View : Check the remaining distance to a hazard

Press the **[M]** Menu button on the Green View screen to hear information about the remaining distance forward / backward to hazards

■ Bunker View : Check the remaining distance to the nearest bunker

Press the **[M]** Menu button on the Hazard View screen to hear information about the remaining distance forward to the nearest left / right bunkers

■ Driving Distance View : Check the driving distance measured so far

Press the **[M]** Menu button in the Bunker View screen to move to the driving distance measurement

■ Screen explanation



<Hazard View>

- ① Remaining distance to the back of the hazard
- ② Remaining distance to the front of the hazard



<Bunker View>

- ① Remaining distance to the front of the bunker



<Driving Distance View>

 
- ① Driving distance measured so far

⁽¹⁾ Press the **[Voice]** Voice button on any screen to move to Green View



⁽²⁾ This screen only appears when driving distance measurement has started


2. Start FineCaddie

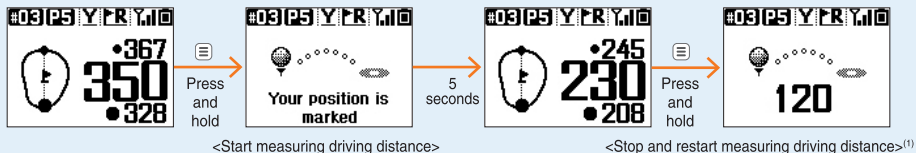7) Measuring Driving Distance



■ Measuring driving distance

- ① Start measuring : Press and hold the  Voice button on the Green View screen to start measuring driving distance
- ② Stop and restart measuring : Press and hold the  Voice button on the Green View screen to show the driving distance measurement and to start measuring a new driving distance

Tip: Press and hold the  Voice button on the tee box before the tee shot to start measuring driving distance.

Then just press the  Voice button at the location where the ball fell to check the driving distance of all shots.

⁽¹⁾ When moving to the next hole, the driving distance is automatically ended





2. Start FineCaddie

8) Virtual round

■ What is Virtual round?

- FineCaddie allows the user to experience the same environment to try out a round before getting on the golf course, the user can experience all the features of FineCaddie in advance
- When Virtual round starts, FineCaddie shows the distance be changed on the screen in real time as the user plays an actual round of golf in a golf course(about 5 minutes)
- Learn functions by pressing various buttons in advance
- When the user closes to the green, FineCaddie turns into the Dynamic Green View mode to show the Green View rotating in real time as the user actually moves around the green
- Set values suitable for you by changing various setting values in advance(Unit setup)

■ How to use

- ① Press and hold the  Menu button from any View screen to move to the Settings screen
- ② Move to Virtual round menu using the   Volume button
Enter to Virtual round using the  Menu button

 
* When Virtual round starts, the device automatically reboots and then Virtual round starts
When Virtual round finishes, the device automatically reboots and then Receiving GPS screen is showed

3. Set up FineCaddie

- 1) How to Navigate the Menu Screen
- 2) Change Pin Location
- 3) Change Left • Right Green
- 4) Change Meters • Yards
- 5) Change Hole manually
- 6) Reset
- 7) Error Code
- 8) Version
- 9) How to Set the Time Zone
- 10) How to Select Languages

3. Set up FineCaddie

1) How to Navigate the Menu Screen

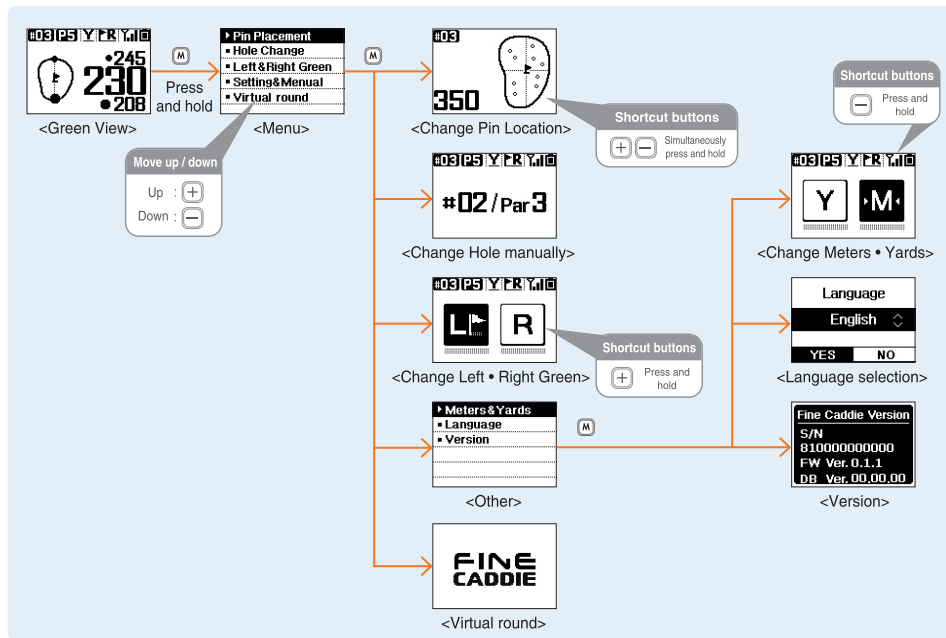

3. Set up FineCaddie

 
2) Change Pin Location

1_ How to use shortcut buttons

Shortcut buttons (**+** **-** simultaneously press and hold) : Press and hold both **+** **-** Volume buttons at the same time from any View screen to move automatically to the Change Pin Location screen

2_ How to use the menu

- ① Press and hold the **[M]** Menu button from any View screen to move to the Settings screen
- ② Using the **+** **-** Volume button move to the change Pin Location screen
Using the **[M]** Menu button move to the related screen
- ③ Change Pin Location using the **+** **-** Volume button
- ④ Press the **[M]** Menu button to save and quit
Press the **[V]** Voice button to quit without saving

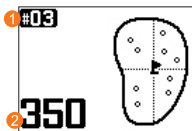

- ① Hole number
- ② Remaining distance to the center of the green

3) Change Left • Right Green

1_ How to use shortcut buttons

Shortcut buttons (**+** press and hold): Press and hold the **+** Volume button from any View screen to change the associated icon at the top of the screen

(**LP** ↔ **PR**)

2_ How to use the menu

- ① Press and hold the **[M]** Menu button from any View screen to move to the Menu screen
- ② Using the **[M]** Menu button to move to the related screen
- ③ Change to the user's desired green using the **+** **-** Volume button
- ④ Press the **[M]** Menu button to save and quit
Press the **[V]** Voice button to quit without saving





⁽¹⁾ If there is one green: The left green is displayed and does not move to the left / right green selection screen if the menu is being used

3. Set up FineCaddie



 





4) Change Meters • Yards


1_ How to use shortcut buttons

Shortcut buttons ( press and hold): Press and hold the  Volume button from any View screen to change the associated icon at the top of the screen

( \leftrightarrow )






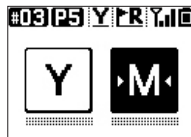 


2_ How to use the menu

 
- 1 Press and hold the  Menu button from any View screen to move to the Menu screen
- 2 Using the   volume button to move to the Meters • Yards change menu
Using the  Menu button to move to the related screen
- 3 Change to the user's desired units by using the   Volume button
- 4 Press the  Menu button to save and quit
Press the  Voice button to quit without saving



5) Change Hole manually

1_ How to use the menu

 - 1 Press and hold the  Menu button from any View screen to move to the Menu screen
- 2 Using the   volume button to move to the manual hole change menu
Using the  Menu button to move to the related screen
- 3 Change to the user's desired hole using the   Volume button
- 4 Press the  Menu button to save and quit
Press the  Voice button to quit without saving

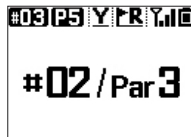

6) Reset

- While using FineCaddie, if it suddenly stops working or breaks, press the  Power button for 8 seconds and it will reboot

 
3. Set up FineCaddie

7) Error Code

- After device updates, if FineCaddie is not working properly, error code will be displayed
In this case, use FineCaddie EZ downloader and retry to update
 - If the error code is displayed continually, please contact your dealer

8) Version

- Display FineCaddie's serial number, Firmware version and golf course data version

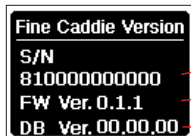

→ S/N : FineCaddie Serial number

→ FW Ver. : FineCaddie Firmware version

→ DB Ver. : FineCaddie Golf course data version

3. Set up FineCaddie

9) How to Set the Time Zone

■ Menu

 
- ① Select your Time Zone
- ② DST(Daylight Savings Time) ON/OFF

■ How to use the menu

- ① Press and hold the [M] Menu button from any View screen to move to the Settings screen
- ② Using the [+/-] Volume button move to the Setting & Manual menu
Using the [M] Menu button select to the Setting & Manual menu
- ③ Using the [+/-] Volume button move to the Time Zone menu
Using the [M] Menu button select to the related screen(screen 1)
- ④ Change to the desired Time Zone using the Volume button
- ⑤ Press the [M] Menu button to save and quit
Press the [≡] Voice button to quit without saving

■ How to use

- ① Using the [+/-] Volume button move to GMT
(Greenwich Mean Time)
- ② Press the [M] Menu button to save and Move to the DST setting
- ③ Set DST ON/OFF using the [+/-] Volume button

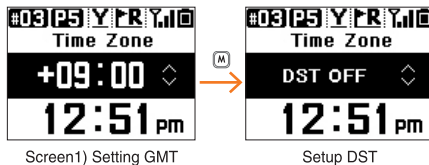

* Please set the Time Zone, after GPS reception is completed.

3. Set up FineCaddie

9) How to Set the Time Zone









■ Standard Time Zones of the world

UTC	City
-10:00	Hawaii
-09:00	Alaska
-08:00	USA(PT)
-07:00	USA(MT)
-06:00	USA(CT)
-05:00	USA(ET)
-04:00	USA(AT)
-03:00	São Paulo, Buenos Aires
-02:00	Brasilia
+00:00	London
+01:00	Berlin, Paris, Rome
+02:00	Athens, Cairo, Helsinki
+03:00	Moscow, Kuwait
+04:00	Dubai
+05:00	Islamabad
+07:00	Bangkok
+08:00	Beijing, Hongkong, Singapore, Taipei
+09:00	Seoul, Tokyo
+10:00	Brisbane, Guam
+11:00	Sydney
+12:00	Fiji

 
3. Set up FineCaddie

10) How to Select the Language

■ Select your preferred language

- ① Press and hold the  Menu button from any View screen to move to the Menu screen
- ② Using the  Volume button move to the Setting & Manual menu
Using the  Menu button select to the Setting & Manual menu
- ③ Using the  Volume button to move to the language menu
Using the  Menu button to select to the related screen (screen 1)
- ④ Change to your preferred language by using the  Volume button
- ⑤ Press the  Menu button to save and quit
Press the  Voice button to quit without saving

* More languages will be supported in the future.

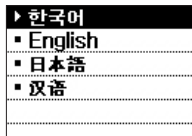

Screen1) Language selection

 
4. How to Update FineCaddie

- 1) Check the Update Version
- 2) Install FineCaddie EZ downloader
- 3) Start Update


4. How to Update FineCaddie

1) Check the Update Version

- ① How to check version information : **Menu > Setting & Manual > Version**

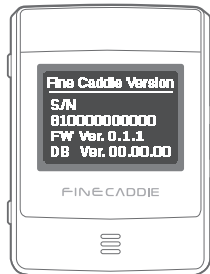


2) Install FineCaddie EZ downloader

- ① Please visit our website (www.fine-drive.com/en) > **Product Information > GolfGPS > Club DB update**
- ② Install "**FineCaddie EZ downloader**" on your computer to update the firmware and the golf course database.
- ③ Click on  (Click the mouse left button once).


Unable to run execute file : Click on **[Internet Explorer menu> Safety > SmartScreen Filter > Turn off SmartScreen Filter]** sequentially

4. How to Update FineCaddie

 
- ④ A mini window will pop up asking you, **[Do you want to run or save this file?]** Click on the **[Run]** button.

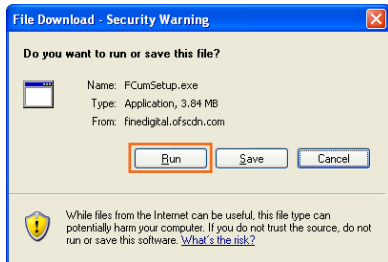

 
- ⑥ A mini Installation window will pop up welcoming you to FineCaddie EZ downloader. Click on the **[Next]** button.

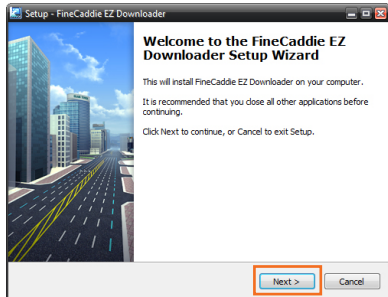

 - ⑤ A **[Are you sure you want to run this software?]** dialog will appear and then click on the **[Run]** button.

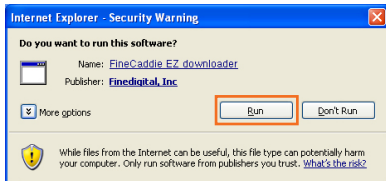


 - ⑦ To specify your own location click on the button **[Browse...]** and select a location for installation. Click on the **[Next]** button to proceed further.
- * We recommend using the default installation folder selected by FineCaddie EZ downloader.

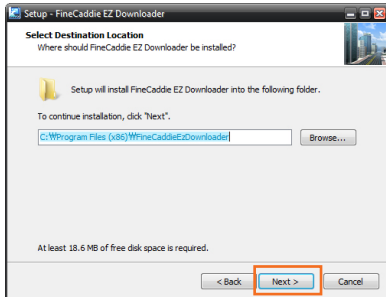


4. How to Update FineCaddie

 
- ⑧ A [Select desired option] dialog may display. Click the [Next] button.

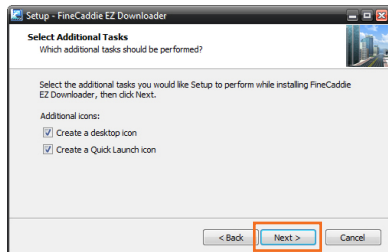

 
- ⑩ Click on the [Finish] button on the [Completing the FineCaddie EZ downloader Setup Wizard] window.

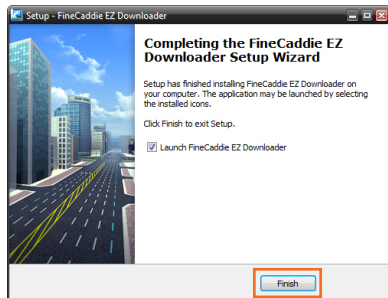

 - ⑨ The [Ready to Install] will appear and then click [Install] button.

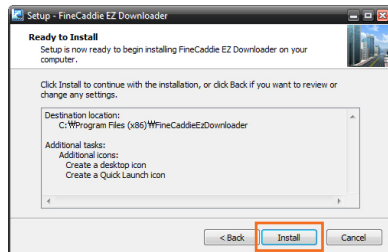

 
- ⑪ [FineCaddie EZ downloader live update] will be running automatically
* It is to update FineCaddie EZ downloader to a newer version and it is not the update for firmware and golf course DB

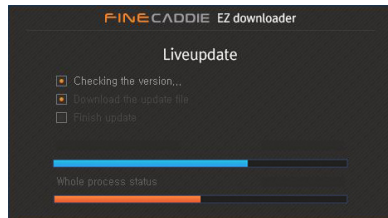

4. How to Update FineCaddie

- ⑫ When the [FineCaddie EZ downloader notice] window appears on your computer just as below picture, the installation of FineCaddie EZ downloader is completed.

 * FineCaddie EZ downloader icon will display on your desktop.

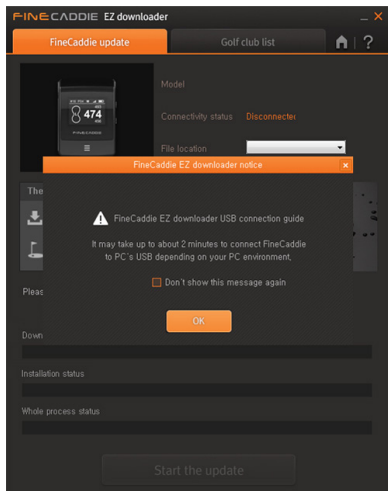

4. How to Update FineCaddie

3) Start Update

① EZ downloader will start automatically after turning on FineCaddie and connecting it on your computer using the USB cable.

* Connect FineCaddie on your computer without power on, the recharging display will be appearing on the device screen.

 
FineCaddie EZ downloader will get started automatically when you turning on FineCaddie at this time.

* You can run the icon of FineCaddie EZ downloader on your desktop when FineCaddie is not connected to your computer.




4. How to Update FineCaddie

- ② When FineCaddie is connected to your computer, model name will appear on screen of FineCaddie. Click on the **[Start the update]** button on the **[FineCaddie Update]** menu after connecting FineCaddie to your computer.

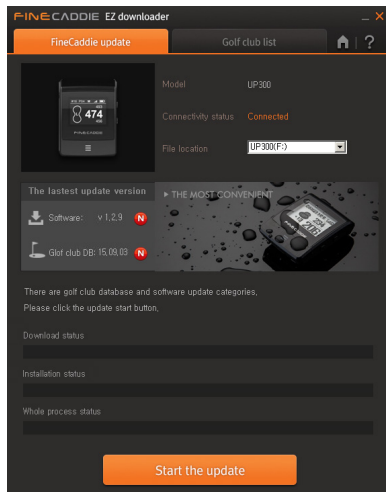

- ③ Update of Firmware and golf course data will be proceed.

 
* The lead time of Update can differ depending on your computer specification and network condition.

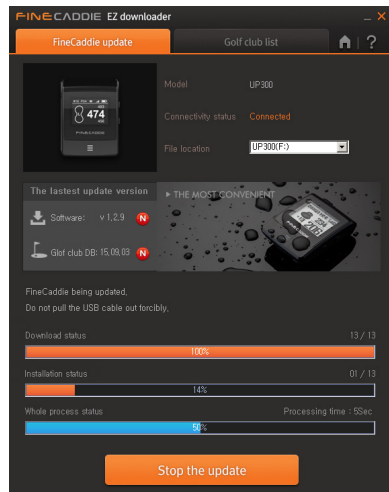


4. How to Update FineCaddie

- ④ Device will be rebooted automatically and update process is completed when you separate device from your computer during the [FineCaddie Update Complete] screen shown up.
 
<Before separating the device>

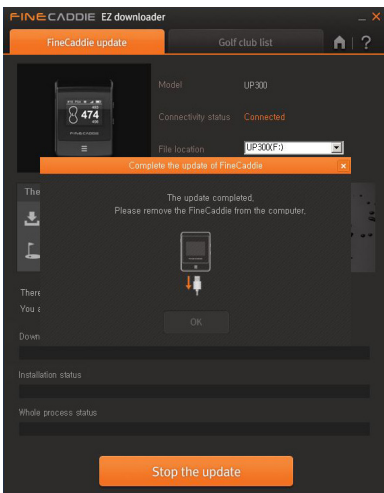

<After separating the device>

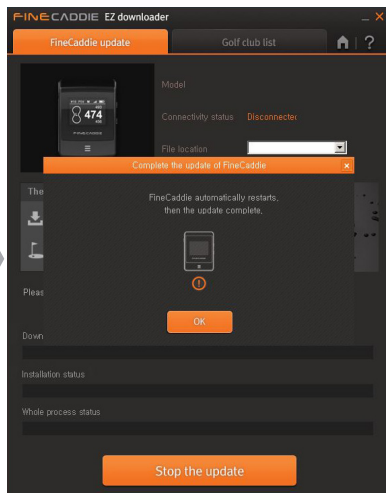 

4. How to Update FineCaddie

- ⑤ Update will start automatically after separating FineCaddie.

* This screen only shows up when the firmware update occurs.



- ⑥ Device will be rebooted in 8 seconds after FineCaddie update completes.

* This screen only shows up when the firmware update occurs.



- ⑦ If FineCaddie booted normally, update process is completed.



5. Appendix

1) Product Warranty

5. Appendix

1) Product Warranty

Product Warranty

※ The product warranty is as follows,
based on FineDigital, Inc.'s consumer damage protection standards for each of our items.

Product Name	FineCaddie
Serial No.	
Date of Purchase	Y M D
Dealer	
Warranty Period	1 year from the date of purchase

※ If the date of product purchase is uncertain, the product warranty period will be counted from 3 months after the date of manufacture or of import clearance.



A series of horizontal dashed lines for writing, starting from the right edge of the orange bubble and extending across the page.

FINECADDIE

www.fine-drive.com/en